

# **Audionet**

## **PRE G2**

Reference Pre-Amplifier

### **User's Manual**



# Contents

<b>1</b>	<b>Preface.....</b>	<b>5</b>
1.1	Included.....	6
1.2	Transport .....	6
<b>2</b>	<b>Overview front panel .....</b>	<b>7</b>
<b>3</b>	<b>Overview back panel .....</b>	<b>8</b>
<b>4</b>	<b>Installation and power supply .....</b>	<b>9</b>
4.1	Placement .....	9
4.2	Mains connection.....	9
4.3	Orientation of mains plug.....	10
4.4	Additional earth connection .....	10
<b>5</b>	<b>Inputs and outputs .....</b>	<b>11</b>
5.1	Inputs.....	11
5.2	Outputs.....	11
5.3	Recording devices.....	12
5.4	Audionet Link.....	12
<b>6</b>	<b>Usage.....</b>	<b>13</b>
6.1	Powering up .....	13
6.2	Switching on and off .....	13
6.3	Mains phase detection.....	14
6.4	Using Audionet Link.....	14
6.5	Control elements on the front panel.....	15
6.6	Volume control .....	15
6.7	Display .....	16
6.8	Input selection .....	17
6.9	Muting .....	17
<b>7</b>	<b>Setup Menu .....</b>	<b>19</b>
7.1	Set Dim Level.....	20
7.2	Balance Adjust.....	21
7.3	Offset Adjust.....	22
7.4	Set DC Servo.....	23

7.5	Channel name .....	24
7.6	Set Autostart .....	24
7.7	Set Off-Text.....	25
7.8	Set Channel for By-Pass Mode.....	26
7.9	Overview factory defaults.....	26
<b>8</b>	<b>Audionet System Remote Control .....</b>	<b>27</b>
8.1	Key assignment PRE G2.....	29
8.2	Screen 1 .....	30
8.3	Screen 2 .....	31
8.4	Screen 3 .....	32
<b>9</b>	<b>Special function By-Pass Mode .....</b>	<b>33</b>
<b>10</b>	<b>Technical information .....</b>	<b>35</b>
10.1	Design .....	35
10.2	Power supply.....	35
10.3	Circuitry.....	35
10.4	Handling.....	35
10.5	Update PRE to PRE G2 .....	36
<b>11</b>	<b>Security advice .....</b>	<b>37</b>
<b>12</b>	<b>Technical data .....</b>	<b>38</b>

# 1 Preface

The Audionet Team congratulates you on your purchase of this unit.

Music lovers know about the importance of the pre amplifier: The pre amplifier determines the sound quality. For those enthusiast we developed the PRE G2, our pre amplifier reference.

The PRE G2 is a luxurious source of pure sound. With the highest accuracy and resolution, coarse and fine dynamic precision and overwhelming spatiality it reproduces music in all its naturalness.

The PRE G2 does not accept compromise. With fundamental scientific research and elaborate development and trial, each detail was conceived and tested. The circuitry is state-of-the-art, its design beyond all doubt and all its components painstakingly selected.

As nothing else could satisfy our demands, we produce operational amplifiers, incremental encoder and signal cables ourselves. Volume is controlled by an electronically switched and in real-time linearized resistor network made of discrete high quality metal film resistors. The audio signal path and control circuitry are decoupled optically. Input and output circuits are immune to negative influences of connected devices. Thus, the PRE G2 manifests the limits of what is possible nowadays regarding measuring techniques. Noise, distortion and crosstalk are almost eliminated.

A microprocessor facilitates versatile control functionality and highest handling comfort. All information is delivered through a big vacuum fluorescent display. Every function is supported by the remote control.

Never show the PRE G2 to other pre amplifiers! They will go green with envy.

But before you start listening to your new Audionet PRE G2, please read this manual carefully so you are able to use and enjoy all functions of this unit without drawback on music quality.

## **1.1 Included**

Included you will find the following items:

- the reference pre amplifier PRE G2
- the Audionet System Remote Control *Harmony One*
- the user's manual (that you are currently reading)
- one standard power cord
- one green-yellow cord for an additional earth connection


## **1.2 Transport**




### **Important**

- Please transport the PRE G2 only in the included package.
- Always use the plastic bag to prevent scratches on the casing.
- Please allow the PRE G2 to adapt to the climatic conditions in your listening room before you switch on the unit for the first time after transport.

## 2 Overview front panel

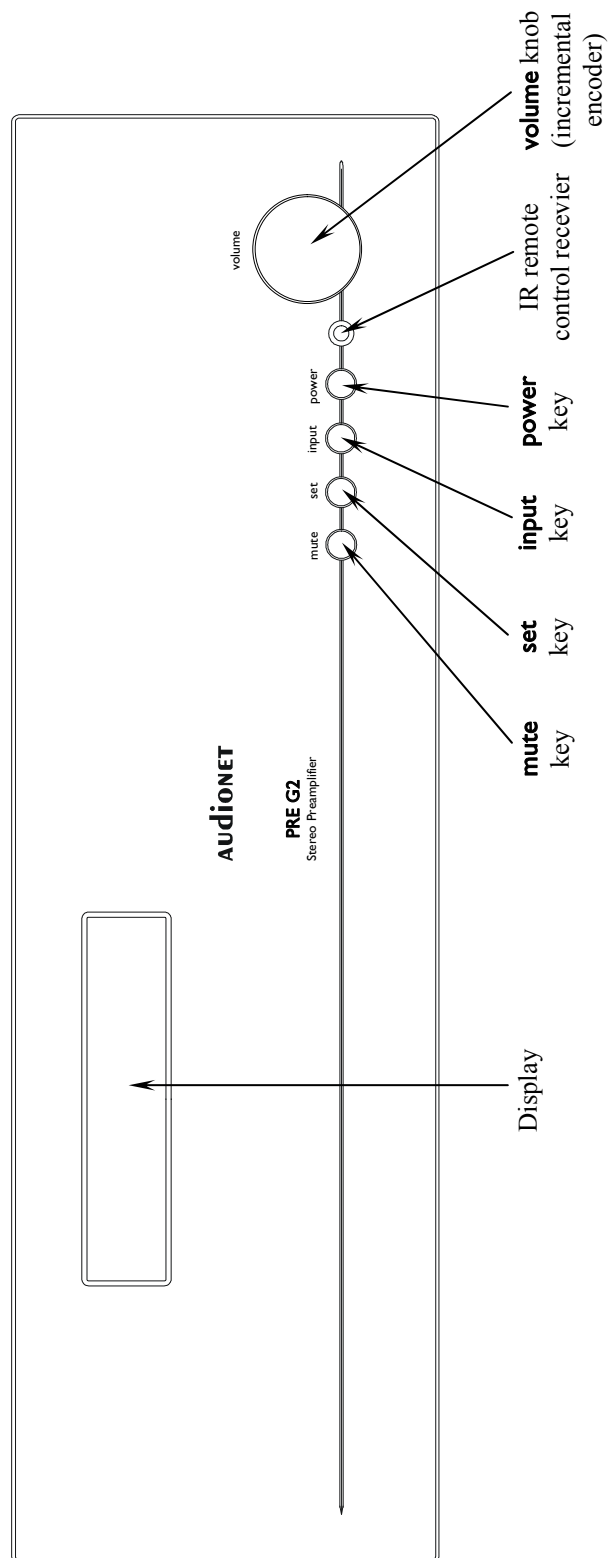

### 3 Overview back panel

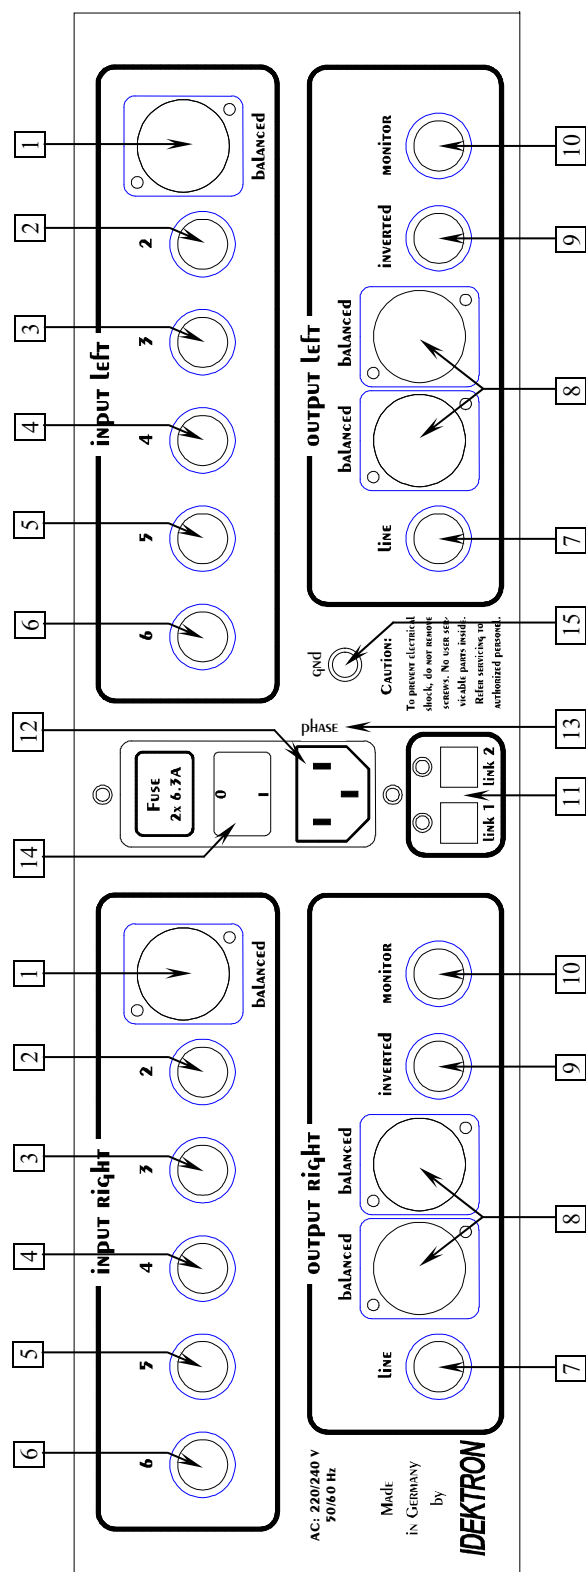

- |   |  |    |  |
|---|--|----|--|
| 1 | Balanced (XLR) input no. 1, left/right | 9  | Inverted Cinch (line) output, left/right |
| 2 | Cinch (line) input no. 2, left/right   | 10 | Monitor output, left/right               |
| 3 | Cinch (line) input no. 3, left/right   | 11 | Outputs Audionet Link 1 and 2            |
| 4 | Cinch (line) input no. 4, left/right   | 12 | Mains input                              |
| 5 | Cinch (line) input no. 5, left/right   | 13 | Marking mains phase                      |
| 6 | Cinch (line) input no. 6, left/right   | 14 | Mains switch                             |
| 7 | Cinch (line) output, left/right        | 15 | Additional earth connector               |
| 8 | Balanced (XLR) outputs, left/right     |    |  |



## 4 Installation and power supply



### Important

- During connecting and removing of sources or amplifiers to the PRE G2 all units of your audio system have to be switched off to prevent damage of the PRE G2 or any of the other connected units.
- Please make sure that all cables are in absolute best conditions! Broken shields or short-cut cables could damage the PRE G2 and/or any other connected unit.

### 4.1 Placement



### Important

- It is recommended to place the PRE G2 into a high quality rack or onto a stable table.
- Do not expose the unit to direct sunlight.
- Do not place the PRE G2 in close range to heat sources like radiators.
- Do not place the PRE G2 on top of other units, especially not on top of power amplifiers, pre amplifiers or similar that produce heat. Both units could suffer damage from thermal overload.
- Do not use the unit in places where it is exposed to vibrations.
- Do not place the unit close to loudspeakers or into the corner of a room where it is exposed to high levels of sonic energy, which might reduce the sound quality of the unit.

### 4.2 Mains connection

The mains input 12<sup>\*</sup> is on the back panel of the PRE G2. To connect the unit to mains use the included mains cord. If you prefer to use a different power cord make sure that it meets the specifications for your home country.



### Important

- The electrical specifications of your home country must meet the electrical specifications printed onto the back panel.

---

<sup>\*</sup> see numbers in section 'Overview back panel' on page 8.

- The PRE G2 is a Class I unit and must be earthed. Please ensure a stable earth connection. Phase ('hot' pin) is marked on the back panel ('**PHASE**') [13].
- If you connect the mains cord please make sure that mains switch [14] at the back panel is switched off.
- Never pull the mains plug while the PRE G2 is switched on! Before you pull the mains cord off its socket [12] at the back panel, power down the unit to stand-by mode and switch off the unit using mains switch [14].

Only in cases of extended absence (like vacations) or if massive trouble on the mains power is to be expected you should switch off the PRE G2 from the mains using mains switch [14]. To disconnect the unit completely from mains pull the mains plug.



#### Tip

- The use of high quality mains cords could improve sound quality. Ask your local dealer for more information.

### 4.3 Orientation of mains plug

The correct polarization of mains is important for reasons of audio clarity and stability. Please connect the mains cord so that the hot pin of the wall outlet is connected to the pin of the mains input [12] marked '**PHASE**' [13]. Your Audionet PRE G2 is able to detect a wrong polarization of the mains plug during start-up. If the message

**Attention: Mains  
Phase incorrect!**

appears in the display, switch off the unit and flip the mains plug in the wall outlet (see section '*Mains phase detection*' on page 14).

### 4.4 Additional earth connection

Included with the PRE G2 you will find a green-yellow cord for the additional earth connection. Attach this cord to the earth connector [15] on the back panel of the PRE G2 and put the plug into the mains socket right beside the mains cord of your PRE G2. This ensures an additional and stable earth connection resulting in a better sound.



#### Note

- We strongly recommend using the additional earth connection!
- Also, a stable earth connection is necessary for the PRE G2 detecting the polarization of mains phase correctly.

## 5 Inputs and outputs



### Important

- During connecting and removing of sources or amplifiers to the PRE G2 all units of your audio system have to be switched off to prevent damage of the PRE G2 or any of the other connected units.
- Please make sure that all cables are in absolute best conditions! Broken shields or short-cut cables could damage the PRE G2 and/or any other connected unit.

### 5.1 Inputs

The PRE G2 is equipped with one balanced (XLR) **1** and 5 Cinch (line) inputs **2** to **6** for connecting signal sources at line level. Due to its double mono design, left and right channel input jacks are separated on the back panel.

Please connect the left and right input of the same number printed on the back panel of the PRE G2 to the corresponding output of the source you would like to connect to the PRE G2.

### 5.2 Outputs

The PRE G2 is equipped with a pair of balanced (XLR) **8** and a pair of Cinch (line) outputs **7** and **9** for the left and right channel each to connect the unit to your amplifier(s). The Cinch (line) output **9** is inverted. Due to the double mono design the left and right output jacks are separated.

Use the left and right Cinch (line) output **7** to connect the PRE G2 to your power amplifier(s) using high quality Cinch cables. Alternatively, you may connect the power amplifier using the balanced (XLR) outputs **8** in case your power amplifier does not support Cinch (line) inputs.

The inverted outputs **9** are primarily designated for amplifiers in bridged operations (in combination with the Cinch (line) outputs **7**).



### Important

- Bridged operations of an amplifier demand a correct setup and connection. Please consult your dealer and/or the manufacturer of your power amplifier to prevent damage to your equipment.



#### Tip

- Of course, you may use the inverted outputs **9** to connect your PRE G2 to an additional amplifier. In this case, please mind to change polarization of the speaker connection at your amplifier (change + to – and – to +).
- Altogether, you can connect up to four stereo or up to eight mono power amplifiers to the PRE G2 simultaneously utilising all outputs.

### 5.3 Recording devices

To prevent any negative influence on the audio signal, the PRE G2 has no regular (tape) monitor loop.

For recording purposes, please connect your recording system like DAT or tape-deck to the monitor output **10** of your PRE G2. Use only input no. 6 **6** of the PRE G2 to playback your recording system. On selecting input no. 6 **6** the monitor output **10** is switched off to prevent any feedback loops between the PRE G2 and your recording system.

Please use inputs no. 1 **1** to no. 5 **5** to connect sources you like to record. With these inputs the monitor output **10** will always be active.

### 5.4 Audionet Link

For your convenience, the PRE G2 can switch on/off all other Audionet units (e.g. power amplifiers) connected via 'Audionet Link' by a simple touch on the included remote control or the **power** key on the front panel.

You only need a simple optical 'Toslink' cable. Connect the 'Audionet Link' output **11** of your PRE G2 to the 'Audionet Link' input of unit to be controlled.

The PRE G2 is equipped with two identical 'Audionet Link' outputs. In case you would like to control more than one Audionet unit via 'Audionet Link', use the second 'Audionet Link' output **11** of your PRE G2 as well.



#### Tip

- Audionet source units and power amplifiers are usually equipped not only with an 'Audionet Link' input, but additionally with an 'Audionet Link' output to connect further Audionet devices to be controlled via 'Audionet Link' in a daisy chain. Connect this 'Audionet Link' output to the 'Audionet Link' input of the next Audionet unit using a simple optical 'Toslink' cable allowing you to switch on/off your complete Audionet system by your Audionet pre amplifier.

## 6 Usage

All functions of the PRE G2 are microprocessor controlled. This guarantees highest precision, exclusive functions, easy handling and protection against operating error.

### 6.1 Powering up

First of all, please make sure your PRE G2 is connected correctly to your signal sources, power amplifier(s) and mains (see section '*Installation and power supply*' on page 9 and '*Inputs and outputs*' on page 11). The PRE G2 is a stand-by unit. Please operate the mains switch 12 on the back panel. The display shows for a brief moment a welcome message. After that the PRE G2 is in stand-by mode. The display will indicate the stand-by mode with either the text **off** or with a small dot (pixel) in the display (see section '*Set Off-Text*' on page 25).

Only in cases of extended absence (like vacations) or if massive trouble on the mains power is to be expected it is recommended to disconnect the PRE G2 from mains. Operate the mains switch 14 on the back panel of the unit to switch off the unit from mains. The display will go dark.



#### Important

- **Before you switch off the PRE G2 from mains, power down and discharge completely all units connected to the outputs of the PRE G2.**

### 6.2 Switching on and off

To power up the PRE G2 from stand-by mode, press the **power** key on the front panel. The PRE G2 issues the message **Waking up...** In case the mains plug has the incorrect polarization a warning will appear in the display (see section '*Mains phase detection*' on page 14). After that the unit is in normal operating mode.

If you would like to switch off the unit, please press the **power** key on the front panel. First, the display shows the message **Going to sleep..** which then will be replaced by the stand-by text (see section '*Set Off-Text*' on page 25). The unit is now in stand-by mode.



#### Note

- Of course, you may switch on/off the PRE G2 with the included Audionet System Remote Control *Harmony One*. For detailed information please refer to section '*Screen 3*' on page 32.

### 6.3 Mains phase detection

The correct polarization of mains is important for reasons of audio clarity and stability. Please connect the mains cord that the 'hot' pin of the wall outlet is connected to the pin marked '**PHASE**' 13 of the mains input 12 on the back panel. The PRE G2 recognizes the incorrect polarization of the mains plug automatically. Right after switching on the unit from stand-by mode by pressing the **power** key on the front panel the following message will appear in the display in case the mains polarization is incorrect:

**Attention: Mains  
Phase incorrect!**

If you read the above message, switch off the unit by pressing the **power** key. Please wait until the display no longer reads **Going to sleep...** Disconnect the PRE G2 by operating the mains switch 14. Now pull the mains plug and re-insert it into the mains socket rotated by 180°.

If you switch on the unit again, the warning should not appear now.



#### Important

- If the PRE G2 issues the mains polarization warning or no warning at all for both positions of the mains plug, check the connection to earth of your mains socket and mains cord. **You have to ensure a stable connection to earth for the mains phase detection of the PRE G2 to work correctly!**

### 6.4 Using Audionet Link

Your PRE G2 is equipped with two 'Audionet Link' outputs 11 allowing you to switch on/off further Audionet units (e.g. power amplifiers, CD player or tuner) connected via 'Audionet Link' (see also section '*Audionet Link*' page 12).

If the rest of your Audionet system is connected to your PRE G2 via 'Audionet Link', all linked units will be automatically switched on/off as soon as you switch on/off the PRE G2 using the **power** key on the front panel or the remote control.



#### Note

- The 'switch on/off' signal is issued to both 'Audionet Link' outputs of the PRE G2 simultaneously. Thus, both outputs are identical in their function and may be used either in combination or separately.
- Please read section '*Audionet Link*' on page 12. Also, consult the user's manuals of your Audionet components connected via 'Audionet Link' for further information.

## 6.5 Control elements on the front panel

The front panel has four keys to control your PRE G2 (see section '*Overview front panel*' on page 7). With these keys you can control all functions as well as all setup options to adjust the unit to your preferences (see section '*Setup Menu*' on page 19).

<b>mute</b>	Use this key to mute or de-mute the PRE G2 (see section ' <i>Muting</i> ' on page 17).
<b>set</b>	Push key shortly to navigate through the setup menu. Keep key pushed for longer than two seconds to exit the setup menu (see section ' <i>Setup Menu</i> ' on page 19).
<b>input</b>	Push key to enter input selection (see section ' <i>Input selection</i> ' on page 17).
<b>power</b>	Use key to switch on/off the unit (see section ' <i>Switching on and off</i> ' on page 13).

## 6.6 Volume control

Use the **volume** knob on the front panel of the PRE G2 to set the desired volume level.

Turn **volume** knob clockwise to increase volume, turn counter clockwise to decrease volume.

The volume control of the PRE G2 runs in a range from –80 dB to +10 dB in real 1 dB steps relatively to the level of the input signal. Differences in input levels can be adjusted for each input channel of the PRE G2 separately (see section '*Offset Adjust*' on page 22).

The **volume** knob is a magnetically buffered incremental impulse encoder without end stop.




### Note

- The **volume** knob is also used to select an option from the setup menu items (see section '*Offset Adjust*' on page 22) as well as to select the input channel (see section '*Input selection*' on page 17).
- To control the volume with the Audionet System Remote Control *Harmony One* use keys **Vol+** and **Vol-** (see section '*Key assignment PRE G2*' on page 29).

## 6.7 Display

The display provides in the normal operating mode the following information:

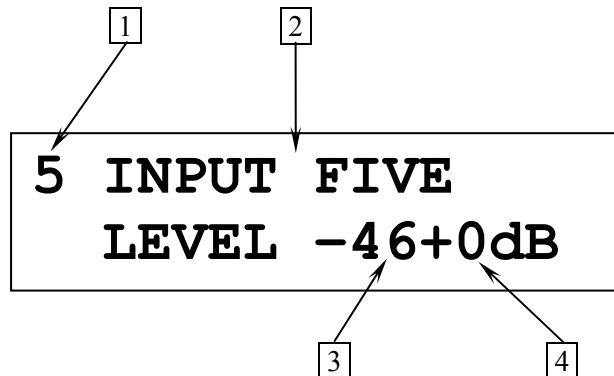

- 1 number of the currently selected input channel, corresponds to the number printed above the input jack on the back panel (see section '*Overview back panel*' on page 8)
- 2 name of the currently selected input channel, fully user-definable (see section '*Channel name*' on page 24)
- 3 current volume level in dB relative to the input level (see section '*Volume control*' on page 15).
- 4 offset for input level of currently selected input channel (see section '*Offset Adjust*' on page 22).

As soon as you enter the setup menu by pushing the **set** key, the display changes to show information related to the selected menu item. For further display details refer to the description of each menu item in section '*Setup Menu*' starting from page 19.



### Note

- After 10 minutes without any user interaction the 'display saver' is invoked automatically. The display then shows only the number of the currently selected input channel and the current volume level. Please refer to section '*Set Dim Level*' on page 20 for further information on the 'display saver' mode.



## 6.8 Input selection

Push the **input** key on the front panel, then select the desired input channel using the **volume** knob. The display shows:

**SELECT INPUT :**  
**5 INPUT FIVE**

The 2<sup>nd</sup> line of the display provides the number and the (user-definable) name of the currently selected input channel.

The PRE G2 features a 'soft' input selection. During the switching of inputs, first the volume is stepped down to –80 dB, followed by switching off the outputs. Now the input section switches to the new input channel. Afterwards the outputs are switched on again, and finally the volume is stepped up to its original level.



### Note

- Leave the input selection function by pressing the **input** key again.
- Using the Audionet System Remote Control *Harmony One*, select an input channel by simply pressing the corresponding key (see section 'Screen 1' on page 30) or digit key (see section 'Key assignment PRE G2' on page 29). Alternatively, use the keys **Ch+** and **Ch-** to switch to the next or previous input channel without using the **Select Input** function (see section 'Key assignment PRE G2' on page 29).

## 6.9 Muting


Push the **mute** key on the front panel to mute or un-mute the PRE G2.

Just as well as the input selection, the PRE G2 uses 'soft' muting, i.e. volume is stepped down gently to –80 dB, then the outputs are switched off. The 2<sup>nd</sup> line of the display informs the user of a muted unit with the text **MUTE**. The text is displayed even if the dim level is set to **Off**.

To de-mute the PRE G2 press the **mute** key again. Here as well, the volume is stepped up gently to its original level after switching on the outputs.



### Note


- While the unit is muted, you may of course select a different input channel as described above. But the PRE G2 will stay muted until you push the **mute** key again to de-mute the unit.
- If you turn the **volume** knob, while the unit is muted, the new volume level will be set and the unit de-muted, if you turn the **volume** knob clockwise, i.e. you turn up the volume.
- Use key  on the Audionet System Remote Control Harmony One to control the muting of your PRE G2 from the comfort of your listening chair (see section '*Key assignment PRE G2*' on page 29).

## 7 Setup Menu

To adjust the PRE G2 to your preferences, please use the setup menu. Push the **set** key shortly on the front panel to get to the first item of the setup menu. Navigate to the next menu item by pushing the **set** key shortly. Below you will find a list of all menu items of the setup menu. After last menu item pushing the **set** key leaves the setup menu automatically.

Of course, you may leave the setup menu from each menu item by pushing and holding the **set** key for longer than two seconds. The PRE G2 will return to normal operation mode.

The order of items in the setup menu is:

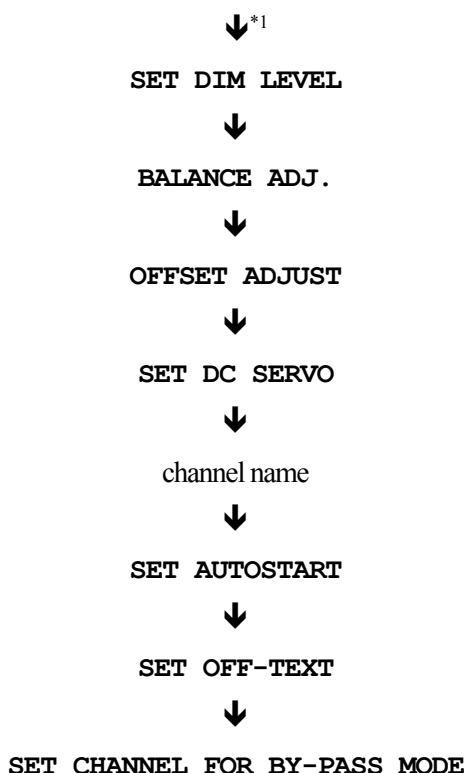

Change any setting of a menu item using the **volume** knob on the front panel.



### Tip

- All settings of the setup menu can be dealt with by using the keys of the front panel. However, if you prefer to change settings from the comfort of your listening chair, please use the included remote control. For more information about the remote control and its usage please refer to section 'Audionet System Remote Control' on page 27.

---

\*1 ↓ = push **set** key shortly (less than two seconds)



#### Note

- If you make no adjustments for longer than 12 seconds the PRE G2 will automatically leave the setup menu and return to normal operations mode.
- While you are in the setup menu the display brightness is set to 100% for better readability. After leaving the setup menu the display brightness is automatically reset to its user selected level.
- If you power down the PRE G2 to stand-by mode all settings are stored automatically in the non-volatile memory of the unit. Even after disconnecting from mains the PRE G2 will still remember your settings.

In the following all options of the setup menu are explained in detail.

### 7.1 Set Dim Level

To adjust the brightness of the display on the front of the PRE G2 press the **set** key once for less than two seconds.

Now use the **volume** knob to select the desired brightness. Turn clockwise to increase or turn counter clockwise to decrease the brightness.



current brightness setting



#### Important

- Long-term usage of the display set to maximum brightness (setting 100%) may cause extended signs of wear resulting in a decay of contrast or brightness of individual dots in the display. Do not use the display with a brightness set higher than the factory default of 50% over a longer period of time!



#### Note

- Is the brightness set to **Off** the display is only on during setup or volume adjustments. It switches off automatically several seconds after the last user entry.

- The PRE G2 activates the 'display saver' automatically after 10 minutes without any user entry.
- During active 'display saver', the display shows only the number of the selected input channel and current volume level in the form of **In 4 -47dB**. The display brightness is always reduced to 25%, and the location of the information text will change randomly every 12 seconds to prevent any 'burn-in' effect of the display.
- The 'display saver' is de-activated and the display returns to its normal mode as soon as any user entry is detected.
- The user cannot switch off the automatic 'display saver' function!




#### Tip

- Get to the option **Set Dim Level** at anytime using the key **Dim Display** on screen page 2 of the included Audionet System Remote Control *Harmony One*. Use keys **Vol+** and **Vol-** to select desired brightness.

## 7.2 Balance Adjust

Push **set** key twice for less than two seconds. The display reads now:

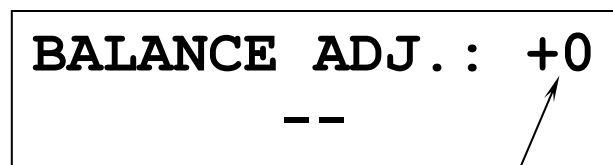

current balance setting in dB

Adjust now the balance by using the **volume** knob.

Turn clockwise to shift the balance to the right. The 1<sup>st</sup> line of the display shows the volume difference in dB between left and right channel. A positive value means that the balance is shifted to the right.

Turn the **volume** knob counter clockwise to shift the balance to the left. The value in the display is now negative.

The PRE G2 allows the user to shift the balance up to 9 dB to the left or the right.

The 2<sup>nd</sup> line of the display visualises a balance shift with one or more symbols. The orientation of the symbol represents the direction of the balance shift, the number of symbols equals the amount of 1 dB the balance was shifted.


### Example:

- ▶▶▶ balance shifted to the right by 3 dB  
◀◀◀◀◀ balance shifted to the left by 5 dB  
-- no balance shift



### Note

- In normal display mode the PRE G2 indicates a balance shift by the corresponding symbol in the 2<sup>nd</sup> line of the display. Thus you are able to see at any time if the balance was shifted:

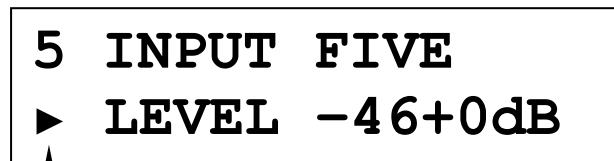


- ▶ = balance shifted to the right  
◀ = balance shifted to the left

- A balance shift is carried out internally by attenuating the corresponding channel, i.e. if the balance is shifted to the right, the level of the left channel is attenuated and vice versa.

## 7.3 Offset Adjust

Push **set** key on the front panel three times for less than two seconds to get to the offset adjustment option.

Turn **volume** knob clockwise to increase the input level of the current channel. If you would like to decrease the input level, turn **volume** knob counter clockwise. The display informs you of your selection:

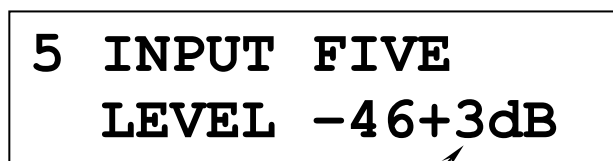

level adjustment in dB

For each of the six input channels of the PRE G2 you can define the adjustment of the input level in the range of -9 dB to +9 dB in steps of 1 dB to match the different output levels of sources connected to the PRE G2.




#### Tip

- If you would like to adjust the input level offset for just another input channel, please use the keys **Ch+** and **Ch-** of the Audionet System Remote Control to switch to the desired channel. The PRE G2 does not leave the setup menu, and you are able to adjust the offset for each input channel very easily.

## 7.4 Set DC Servo

Push the **set** key four times for less than 2 seconds to adjust the DC Servo option.

Turn **volume** knob on the front panel clockwise to activate the DC Servo for the currently selected input channel. Turn **volume** knob counter clockwise to disable the DC Servo.

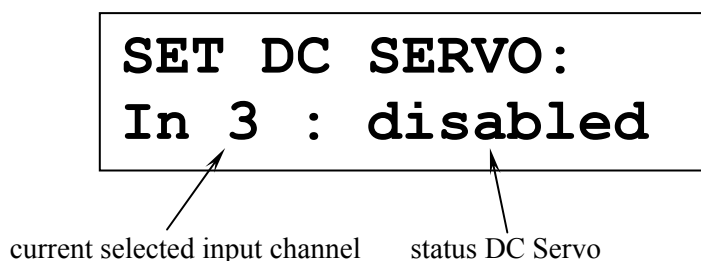

**disabled**      The DC Servo is disabled for the currently selected input channel.


**active**      The DC Servo is active for the currently selected input channel.

Activate the DC Servo if the source connected to the PRE G2 holds a high DC component in its output signal. The DC Servo eliminates the DC component. The currently selected input channel is now AC-coupled. Usually the DC Servo may be disabled.



#### Note

- In normal operating mode the display indicates an active DC Servo for the currently selected input channel by a symbol right beside the channel name in the 1<sup>st</sup> display line. Thus you can see at any time if the DC Servo is active:

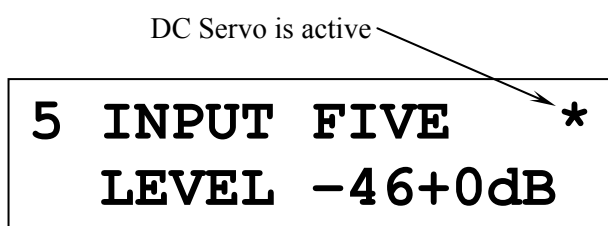



#### Tip

- If you would like to set the DC Servo option for more than just the current input channel, please use keys **Ch+** and **Ch-** of the Audionet System Remote Control to select the desired input channel. The PRE G2 does not leave the setup menu, and you are able to adjust the DC Servo option for each input channel very easily.


## 7.5 Channel name

You can assign a fully user-definable name up to 12 characters in length to each of the six input channels. Push the **set** key on the front panel five times. The display will then show the number of the currently selected input channel and the assigned channel name. The cursor in the 2<sup>nd</sup> line of the display marks the character you now may alter.

Turn the **volume** knob to select the desired character. Push the **mute** key to advance the cursor to the next character position. After last position the cursor wraps around and starts at the first position again.



#### Tip

- If you would like to re-name the channel name for more than just the currently selected input channel, use keys **Ch+** and **Ch-** of the Audionet System Remote Control to switch to the desired input channel. The PRE G2 does not leave the setup menu, and you are able to define the channel name for other input channels very easily. Press key  of the Audionet System Remote Control to advance the cursor one position to the right.

## 7.6 Set Autostart

Push the **set** key six times for less than two seconds to get to the Autostart option.

Turn the **volume** knob on the front panel clockwise to activate the Autostart function. Turn the **volume** knob counter clockwise to disable the Autostart function.



## SET AUTOSTART: active

**disabled** The Autostart function is disabled. If you switch on the unit with the mains switch **14** on the back panel the PRE G2 will go into stand-by mode. You have to push the **power** key on the front panel or, alternatively, the keys **Power On** or **Power Toggle** of the Audionet System Remote Control to start up the unit to go into normal operating mode<sup>\*)</sup>.

**active** The Autostart function is active. As soon as you switch on the unit with the mains switch **14** on the back panel the PRE G2 will start up and automatically go into normal operating mode. Use this setting for timer controlled operations.

### 7.7 Set Off-Text

Push the **set** key on the front panel seven times for less than two seconds to select the display option during stand-by mode.

Turn the **volume** knob clockwise to select display option 'dot'. Turn **volume** knob counter clockwise to select display option 'off'.

## SET OFF-TEXT: dot

**off** The stand-by mode is indicated by the text **off**.

**dot** The stand-by mode is indicated by a small dot (pixel) in the display.



#### Note

- Approx. every 12 seconds the stand-by mode indicator changes position randomly in the display to prevent any 'burn in' effect (see section 'Set Dim Level' on page 20).

---

<sup>\*)</sup> or use a corresponding Activity; see separate user's manual to the Audionet Sytem Remote Control *Harmony One*

## 7.8 Set Channel for By-Pass Mode

Push the **set** key on the front panel eight times for less than two seconds to enter the option for selecting the input channel in By-Pass Mode.

Use the **volume** knob on the front panel to select the input channel you would like to use for the By-Pass Mode.

**SET CHANNEL FOR  
BY-PASS MODE: 3**



### Note

- For detailed information about the By-Pass Mode please refer to section '*Special function By-Pass Mode*' on page 33.
- If no input channel is selected for the By-Pass Mode, the display will show: **SET CHANNEL FOR BY-PASS MODE: - -**.



### Important

- Before you can use the By-Pass Mode you have to select the input channel that is used for the By-Pass Mode. Otherwise the PRE G2 will issue the warning: **No input for By-Pass selected**.
- For safety reasons the factory default settings have **no** input channel selected for By-Pass Mode (display: **SET CHANNEL FOR BY-PASS MODE: - -**).

## 7.9 Overview factory defaults

Option	Setting
SET DIM LEVEL	50%
BALANCE ADJ.	- -
OFFSET ADJUST	0 dB (for all inputs)
SET DC SERVO	In 1-5: disabled In 6: active
Channel name	1: BALANCED 2: INPUT TWO 3: INPUT THREE 4: INPUT FOUR 5: INPUT FIVE 6: TAPE INPUT
SET AUTOSTART	disabled
SET OFF-TEXT	dot
SET CHANNEL FOR BY-PASS MODE	- -

## 8 Audionet System Remote Control


Every function of the PRE G2 is accessible via the Audionet Systemfernbedienung *Harmony One*. Additionally, up to 14 other devices can be controlled by the *Harmony One*.

Press key **Devices** to enter **Device Mode**. The display now lists all devices included in the current configuration of the *Harmony One*. Select **PRE G2** from the list to set the *Harmony One* to controlling the PRE G2. The **Device Mode** gives you access to all the possible commands to control your PRE G2. The following explains all these commands in detail.



### Important

- During everyday use, you should never need to use the **Device Mode** of your Harmony One, but control the PRE G2 (and other devices of your audio setup) by customizing your Activities. For detailed information on how to customize and use Activities on your Harmony One please consult the separate user's manual that came with your Harmony One.

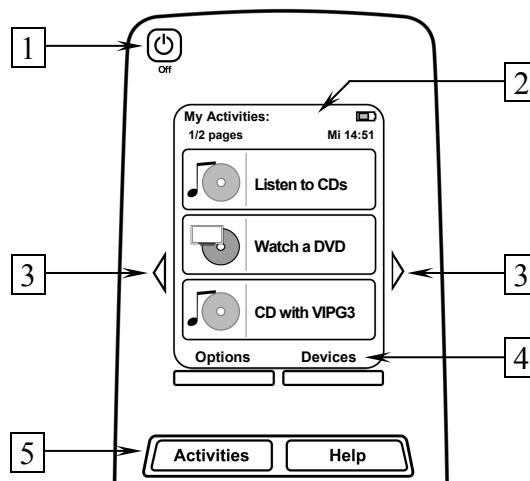


- 1 Power** key for use with Activities, turns all devices off that are included into the current Activity. See separate user's manual of *Harmony One*.
- Depending on the operational mode, the touch screen of the *Harmony One* shows a list of Activities or Devices, help or infrared commands and any available listings.
- If a menu or listing stretches over more than one screen page, use the corresponding arrow buttons to go to the next or previous page of the menu or listing. (see also separate user's manual of the *Harmony One*).
- 4 Devices** key, lists all the devices on the display, and allows you to select and directly control any device included in the configuration of

the remote control (see separate user's manual of *Harmony One*). Select **PRE G2** to enter **Device Mode** for controlling the PRE G2.

- 5 **Activities** key: Press this key to view a list of Activities you have added. Press the button next to the Activity you want to select, and the *Harmony One* will control your entertainment system (see separate user's manual of *Harmony One*).



#### Important

- The Power key  is only available for Activities. In Device Mode the Power key has no function.
- Even without using an Activity, the user is able to control all functions of the PRE G2 using the *Harmony One* in Device Mode.
- The keys described below to control the PRE G2 refer to the factory default programming of the Audionet System Remote Control *Harmony One*. Understandably, any changes done to this setup by the user cannot be discussed here.



#### Tip


- In order to switch the PRE G2 on/off, **without** using an Activity, please use the keys **Power On**, **Power Off** and/or **Power Toggle** on screen 3 (see section 'Screen 3' on page 32). Of course, it is possible to control the PRE G2 without any Activity, but to tap the full potential of the *Harmony One* you need to configure Activities customized to your needs (please refer to separate manual of the remote control *Harmony One*).




#### Note

- Please read the separate user's manual to your Audionet system remote control *Harmony One*. Activities, Devices and Device Mode as well as customizing the remote control are discussed there.


## 8.1 Key assignment PRE G2

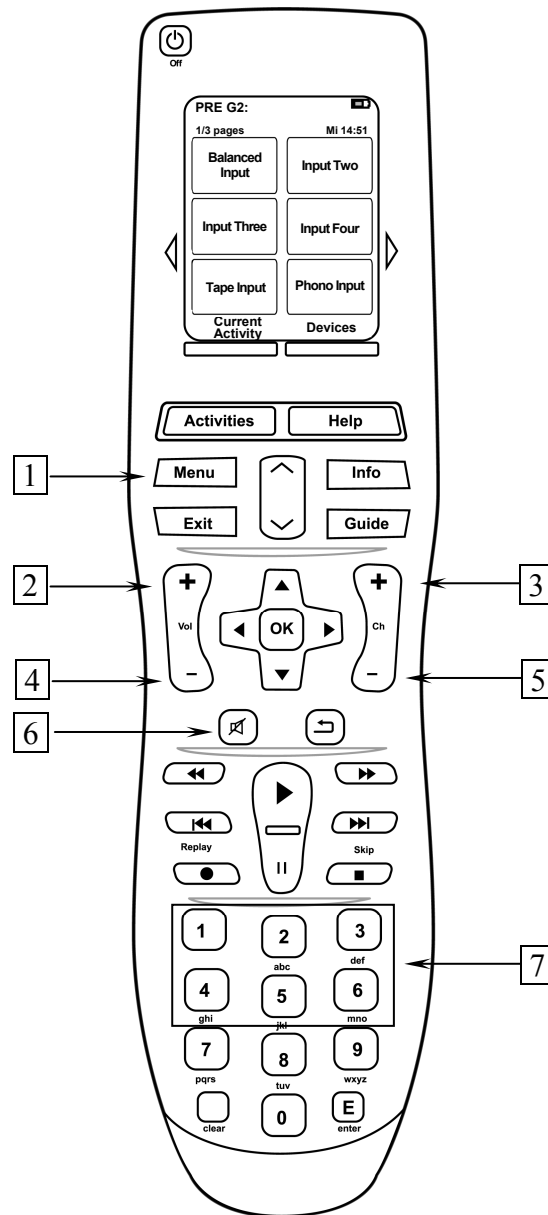

- 1 Use key **Menu** to navigate through the setup menus. This key has the same function as key **set** on the front panel (see section 'Setup Menu' on page 19) or key **Set** on screen page 2 (see section 'Screen 2' in page 31).
- 2 **Vol+**, increases the volume of the PRE G2, also for selecting setup options. **Vol+** equals turning the **volume** knob on the front panel clockwise.
- 3 **Ch+**, switches to the next input channel (see section 'Input selection' on page 17).

 
- 4 **Vol-**, decreases the volume of the PRE G2, also for selecting setup options. **Vol-** equals turning the **volume** knob on the front panel counter clockwise.
- 5 **Ch-**, switches to the previous input channel (see section '*Input selection*' on page 17).
- 6 , mutes the PRE G2. This key has the same function as the key **mute** on the front panel (see section '*Muting*' on page 17).
- 7 **Digit keys** for direct input selection (see section '*Input selection*' on page 17).

## 8.2 Screen 1

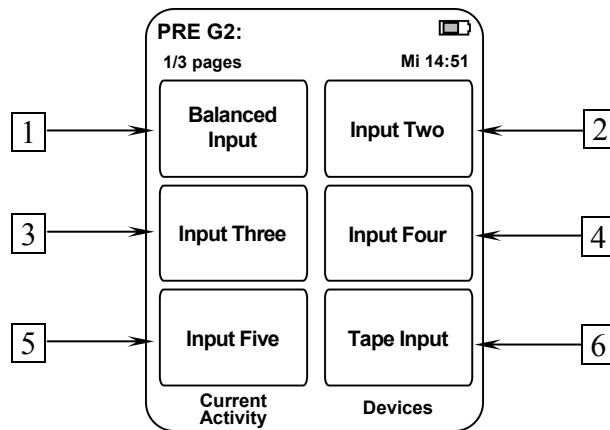


- 1 Directly selects input channel no. 1.
- 2 Directly selects input channel no. 2.
- 3 Directly selects input channel no. 3.
- 4 Directly selects input channel no. 4.
- 5 Directly selects input channel no. 5.
- 6 Directly selects input channel no. 6.

## 8.3 Screen 2

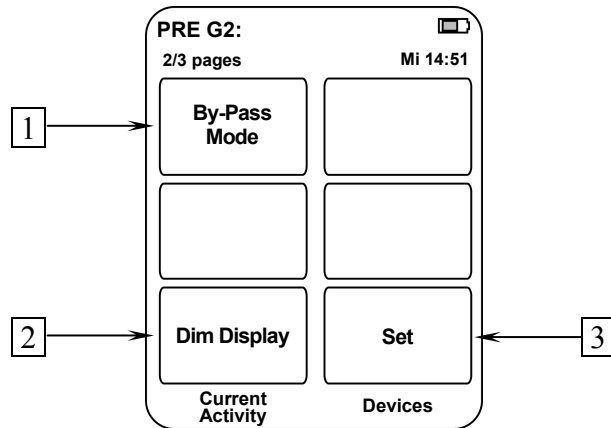

- 1 The button **By-Pass Mode** has no function in firmware 42.0A or higher and exists only to be compatible to older firmware versions. **Please read section 'Special function By-Pass Mode' on page 33 first, before you use the special function By-Pass Mode.**
- 2 **Dim Display** jumps directly to the setup menu item **Set Dim Level1** (see section 'Set Dim Level' on page 20).
- 3 Use **Set** to navigate through the setup menus. This key has the same function as the **set** key on the front panel (see section 'Setup Menu' on page 19) or key **Menu** of the *Harmony One* (see section 'Key assignment PRE G2' on page 29).

## 8.4 Screen 3

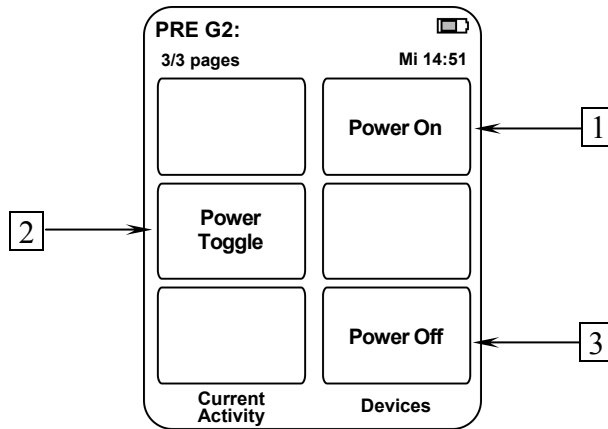

- 1 If the PRE G2 is in stand-by mode, press key **Power On** to switch the unit on.
- 2 Use **Power Toggle** to switch on/off the PRE G2. This key has the same function as the **power** key on the front panel. If the PRE G2 is in stand-by mode, **Power Toggle** switches on the unit. If the PRE G2 is already switched on, **Power Toggle** switches off the unit to stand-by mode.
- 3 If the PRE G2 is switched on, use key **Power Off** to switch the unit off to stand-by mode.



## 9 Special function By-Pass Mode



### Tip

- The By-Pass Mode was primarily intended to integrate its overwhelming sound quality of the PRE G2 into an existing home cinema setup or to expand an existing excellent stereophonic system based on the PRE G2 to a complete home cinema setup without missing out on the qualities of the PRE G2. To realise this kind of setup, please proceed as follows:
  1. Connect your home cinema pre amplifier according to its user's manual.
  2. Connect the output for the front channels Left and Right not to the power amplifier but to one of the free inputs of the PRE G2.
  3. Now connect the outputs of the PRE G2 to the corresponding power amplifier for the channels Left and Right.
  4. Use menu item 'Set Channel for By-Pass Mode' of the setup menu of the PRE G2 to select the input channel for By-Pass Mode you connected the outputs Left and Right of the home cinema pre amplifier to.
  5. Connect now all high quality 2-channel analog sources to the remaining inputs of the PRE G2.
  6. Connect your DVD player to your home cinema pre amplifier as usual.

Use the PRE G2 to listen to high quality analog sources. If you would like to use your home cinema system activate the By-Pass Mode of the PRE G2 and use your home cinema pre amplifier as usual.



### Important

- **Please read the complete section about the special function By-Pass Mode first before you use this function in order to prevent maloperations and possible damage to your audio system and/or hearing.**
- **By factory default no input channel is selected for the By-Pass Mode. Use menu option 'Set channel for By-Pass Mode' to select desired input channel for the By-Pass Mode.**

When the By-Pass Mode is active the volume control of the PRE G2 is by-passed. The PRE G2 passes through the input signal to the outputs with its **full** level.

Please use setup option 'Set Channel for By-Pass Mode' to select which of the six input channels of the PRE G2 is fed through to the outputs if By-Pass Mode is active.



### Important

- First, select the input channel used for By-Pass Mode (see section '*Set Channel for By-Pass Mode*' on page 26), before you activate the By-Pass Mode for the first time.

The special function By-Pass Mode of your PRE G2 is activated automatically if you switch to the input channel selected for By-Pass Mode in the setup option "**Set input channel for By-Pass Mode**". The signal at the input channel selected for By-Pass Mode operations is passed through the PRE G2 at a level of 0 dB (i.e. no change in volume level) to the outputs.

As soon as you select a different input channel, the special function By-Pass Mode is switched off automatically.



### Important

- **Please check the correct connection and setup before you use the By-Pass Mode for the first time. The input signal will be passed through to the outputs at full level!**

As soon as the By-Pass Mode is activated, the PRE G2 will ignore all control commands coming from the keys on the front panel or remote control (exceptions see below)!



### Important

**There are only two possibilities to disable the By-Pass Mode:**

1. Select a different input channel. The PRE G2 switches to the newly selected input channel, resetting the volume to its prior level.
2. Push the **power** key on the front panel. The PRE G2 switches off to stand-by mode.



### Note

- If you leave the By-Pass Mode by pushing the **power** key on the front panel, this mode will be saved, i.e. if you switch on the PRE G2 again, the unit will switch to the last saved input channel selection and thus into the By-Pass Mode.

## **10 Technical information**

### **10.1 Design**

The PRE G2 has complete double mono design for absolute channel separation. To optimize the high frequency properties the circuitry was consequently miniaturized and SMD technology implemented. Signal path ways are limited to their minimum, and chassis and circuit design magnetically and capacitively optimized. The System is controlled and monitored by a powerful microprocessor. The control unit and the analog section are galvanically separated by opto-couplers.

### **10.2 Power supply**

Power is provided by two encapsulated 100 VA toroid core transformers. Fast buffer capacitors, especially designed for Audionet, with 82.000  $\mu$ F for each channel and extremely fast, discrete regulators stabilize the supply voltages. Additionally, voltages are smoothed locally by 12 regulators for each channel. Thus, the power supply is quasi de-coupled from mains accumulator-like. Also, the digital section has its separate power supply.

### **10.3 Circuitry**

All operational amplifiers (OP) in the signal path are discrete and optimized for their special purpose. Each OP is supplied with power by to fast and discrete regulators. All 10 discrete OP modules work in low distortion Class A mode and have a gain-bandwidth product of 1.5 GHz.

The input OPs have a nearly infinite input impedance and constant capacity. Thus, they do not load the signal source. Gold plated precision relays switch both signal and ground of the inputs.

The output OPs work in high bias current Class A mode rendering them immune against reflux of the power amplifiers.

Volume and balance is controlled, free of electro-mechanical components, by an electronically switched and in real-time linearized precision resistor network with true 1 dB resolution.

### **10.4 Handling**

A microprocessor controls and monitors all functions. A two line, 16-digit display informs the user about all operating modes and makes it easy to adjust the PRE G2 to the user's preferences. The unit also features

user-definable channel names and input level adjustment for each channel. Two 'Audionet Link' outputs facilitate easy daisy-chaining of Audionet devices for remote switching on/off via 'Audionet Link'. Each input channel features a user selectable DC Servo to eliminate DC components on source signals.

## **10.5 Update *PRE* to *PRE G2***



### **Note**

- An Audionet PRE updated to does not feature a DC Servo. The corresponding menu item in the setup menu is omitted for these units. Quality of performance and appearance is the equal to the original PRE G2.

## 11 Security advice



### Important

- Avoid packaging material, especially plastic bags, coming into children's hands!
- Store and operate the unit in a dry room at a reasonable room temperature only!
- Avoid moisture, any liquids, dirt or small objects getting into the unit!
- Set up the unit in a sufficiently ventilated environment!
- Do not cover the unit!
- Do not open the unit. Unauthorised opening will void warranty!
- Do not short-circuit the outputs!
- During connecting or removing the PRE G2 to/from sources and/or power amplifiers all units have to be switched off to prevent damage of the PRE G2 or any of the other connected units.
- Use dry cloth for cleaning!

We would like to wish you many exciting listening experiences with your new Audionet product.

If you still have any questions, do not hesitate to ask your competent Audionet dealer or contact us directly.

## 12 Technical data

<b>Function</b>	microprocessor controlled pre-amplifier
<b>Frequency response</b>	0 – 2,000,000 Hz (-3 dB), DC coupled 2 – 2,000,000 Hz (-3 dB), AC coupled
<b>THD+N</b>	>102 dB @ 20 kHz >114 dB @ 1 kHz
<b>SNR</b>	> 110 dB, 2 V <sub>RMS</sub> input
<b>Channel separation</b>	>140 dB, 20 – 20,000 Hz
<b>Inputs</b>	5 pair Cinch line, gold plated 1 pair XLR balanced, gold plated
<b>Outputs</b>	1 pair Cinch line, gold plated 1 pair Cinch inverted, gold plated 2 pair XLR balanced, gold plated 1 pair Cinch Monitor, gold plated 2 Audionet Link, optical 1 connector, gold plated, for additional earth connection
<b>Output impedance</b>	22 Ohms real
<b>Output current</b>	max. 60 mA
<b>Mains</b>	230 V, 50...60 Hz
<b>Power consumption</b>	max. 50 Watts
<b>Dimensions</b>	Width 430 mm Height 140 mm Depth 420 mm
<b>Weight</b>	20 kg
<b>Finish</b>	Front: brushed aluminium, black anodised, white print or aluminium 'nature', anodised, black print Display: red or blue Top cover: brushed aluminium, black anodised Chassis: steel, black coated

<b>Features</b>	<ul style="list-style-type: none"> <li>- Audionet System Remote Control <i>Harmony One</i> (included)</li> <li>- automatic detection of main polarization</li> <li>- separate power supply for digital and analog sections</li> <li>- separate power supply for left and right audio channels (analog)</li> <li>- electronically switched and real time linearised precision resistors for volume control</li> <li>- discrete Audionet operational amplifiers in the audio signal path</li> <li>- audio and control functions optically decoupled</li> <li>- full DC coupling, no capacitors in the signal path</li> <li>- selectable AC coupling via DC servo</li> <li>- separate level adjustment for each input channel</li> <li>- By-Pass function (e.g. for integration into home cinema systems)</li> <li>- Auto start function for timer operations</li> <li>- Audionet Link outputs for remote control of other Audionet components (e.g. power amplifiers)</li> </ul>
<b>Options</b>	<p>recommended for phono applications:  external phono pre-amplifier Audionet PAM  (with optional external power supply Audionet EPS)</p>

Errors and omissions excepted. Specifications and design are subject to changes without prior notice.

**AUDIONET** is a trademark of Idektron GmbH & Co KG

Engineered and produced by:  
Idektron GmbH & Co. KG, Herner Str. 299, Gebäude 6, 44809 Bochum, Germany  
[www.audionet.de](http://www.audionet.de)  
[contact@audionet.de](mailto:contact@audionet.de)